



DV to VHS Dubbing

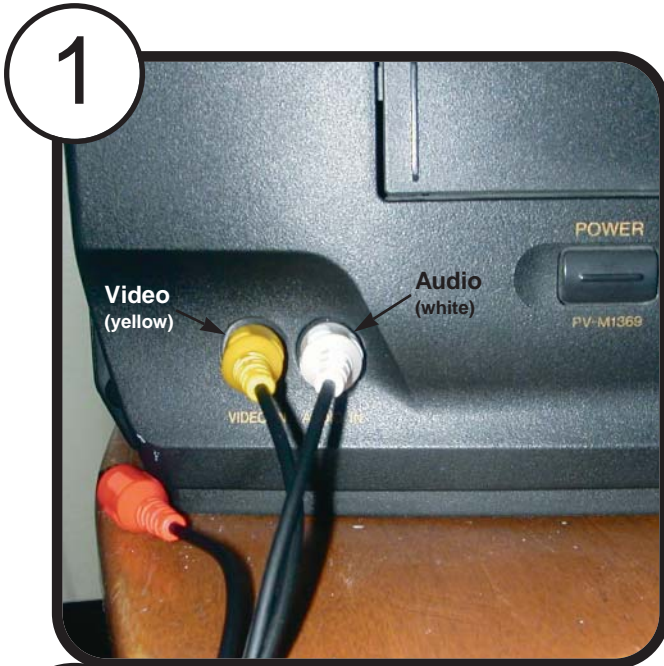


*Red plug not needed.


Video (yellow) | Audio (white)

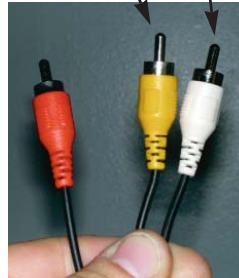


1) Plug RCA Jack into TV as Shown

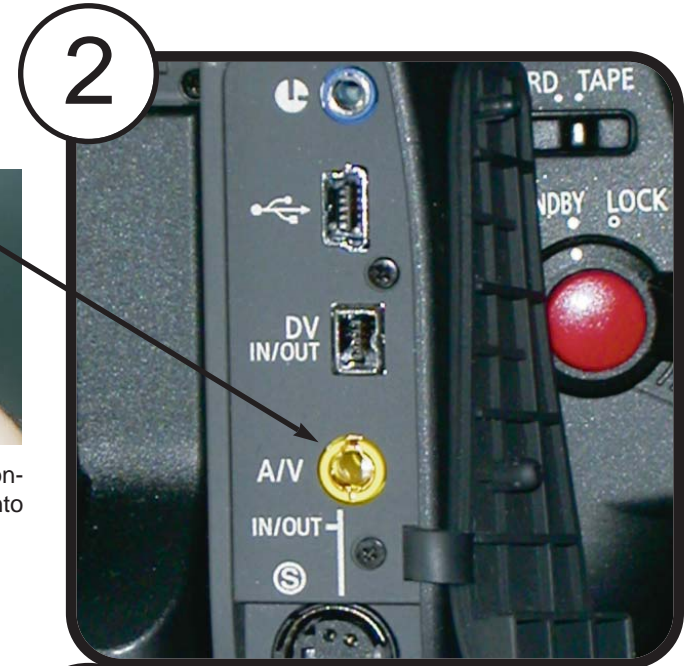

2) Plug the single connector end of cord into the A/V port on the camera

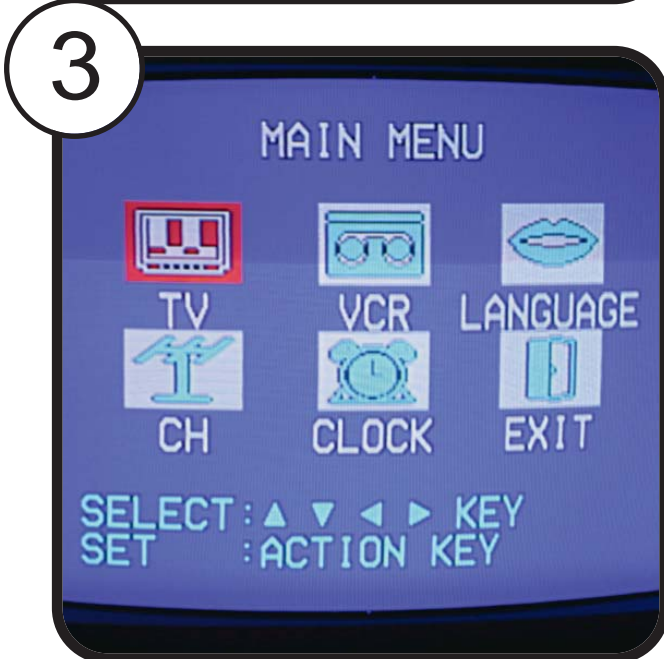

3) Press the "Action" button on the remote to call up the main menu. Using the "Volume" and "Channel" buttons highlight the "TV" option

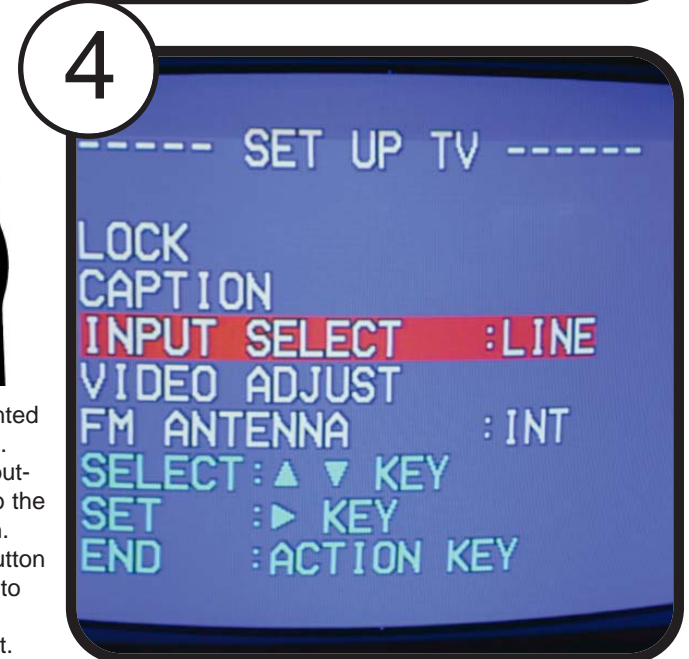

4) With "TV" highlighted press "Action" again. Use the "Channel" button to move down to the "Input Select" option. Use the "Volume" button to change the input to "Line" mode. Press "Action" again to exit.

DV to VHS Dubbing

5



5) Insert a blank videotape into the television's VCR. Insert the DV tape to be copied into the DV Camera. Press "Record" on the VCR.

6



6) Press "Play" on the Camera.